

# T-I Max

## Next-Generation AMC Monitors

GASES & CHEMICALS

CEMS

ENERGY

ATMOSPHERIC

SEMI & HB LED

SYNGAS

LAB & LIFE SCIENCE

**Based on Tiger Optics' new global platform, the T-I Max series monitors for Airborne Molecular Contaminants (AMCs) deliver unprecedented performance, including:**

- Sensitive, absolute measurement technique, using Cavity Ring-Down Spectroscopy (CRDS)
- Dramatically improved speed of response
- Parts-per-trillion detection limits
- Drift-free, with calibration traceable to the world's leading reference labs
- Lowest Cost of Ownership and maintenance

### **Next-Generation Trace Gas Analyzers for Detection & Continuous Monitoring of Airborne Molecular Contaminants in Semiconductor Cleanrooms**

You can spend a long time "looking" for Airborne Molecular Contaminants (AMCs) when the catastrophic product performance or yield loss is discovered at your device final test stage; or you can deploy Tiger Optics' T-I Max series analyzers to locate and to monitor these invisible defect generators, commonly found lurking in and around equipment, personnel, wafer carriers and cleanroom bays.

In today's advanced semiconductor processing, the residual gases, vapors and chemicals emanating from the various materials, accelerated processing operations, and substrate storage and transport have become a critical concern. So much so that the

International Technology Roadmap for Semiconductors (ITRS) now highlights AMC contamination as a key technical challenge in achieving and sustaining low defect rates on devices.

With a particular focus on the major contributors to the "chemical contamination" element of AMCs, the T-I Max series analyzers, based on Tiger's new global platform, can detect and continuously monitor HF, HCl, and NH<sub>3</sub> with an unprecedented combination of sensitivity, selectivity, and speed of response.


Tiger Optics' GO-cart for AMCs adds additional flexibility by providing a mobile platform that can be moved quickly to different critical monitoring points.

**Tiger**optics

**21<sup>ST</sup>** CENTURY SPECTROSCOPY

# T-I Max

## Next-Generation AMC Monitors

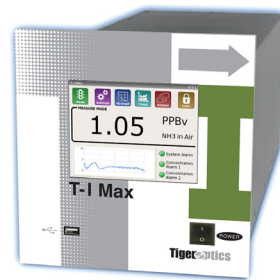

### Performance

Operating range	See table below
Detection limit (LDL, 3σ@100s)	See table below
Precision (1σ@100s, greater of)	± 0.5% or 1/3 of LDL
Accuracy (greater of)	± 4% or 2×LDL
Speed of response @ 20ppb (T10/90 + T90/10)	See table below
Environmental conditions	10°C to 40°C
	10% to 90% RH (non-condensing)
Sample conditions	17°C to 23°C
	35% to 55% RH
Storage temperature	-10°C to 50°C

### Gas Handling System and Conditions\*

Wetted materials	Optimized for ppt-level AMCs and fast speed of response
Gas connections	1/4" PFA Swagelok® inlet & outlet
Inlet pressure	0 – 10 psig (1 – 1.7 bara)
Outlet pressure	Vacuum (<10 Torr)
Flow rate	~2 slpm @ 1 atm inlet pressure
Sample gases	Cleanroom air, CDA or N <sub>2</sub>
Gas temperature	Up to 60°C

### Dimensions

H x W x D [in (mm)]

Standard sensor (w/o external particle filter)	8.73 x 8.57 x 23.6 (222 x 218 x 599)
Sensor rack (fits up to two sensors)	8.73 x 19.0 x 23.6 (222 x 483 x 599)
GO-cart	50 x 23 x 36 (1270 x 584 x 914)

### Weight

Standard sensor	33 lbs (15 kg)
GO-cart	260 lbs (118 kg)
(both excl. vacuum pump)	

### Electrical and Interfaces

Alarm indicators	2 user programmable
	1 system fault
	Form C relays
Power requirements	90 – 240 VAC, 50/60 Hz
Power consumption	40 Watts max.
Signal output	Isolated 4–20 mA
User interfaces	5.7" LCD touchscreen
	10/100 Base-T Ethernet
	USB, RS-232, RS-485
	Modbus TCP (optional)
Data storage	Internal or external flash drive

Performance in cleanroom air:	Range	LDL (3σ@100s)	Speed of Response (T10/90+T90/10)
T-I Max HF	0 – 1 ppm	20 ppt	< 3 minutes @ 20 ppb
T-I Max HCl	0 – 4 ppm	100 ppt	< 30 seconds @ 20 ppb
T-I Max NH <sub>3</sub>	0 – 40 ppm	300 ppt	< 3 minutes @ 20 ppb

\*Vacuum source with >2 slpm @ 10 Torr required

Contact us for additional analytes.  
U.S. Patent # 7,277,177

# T-I Max

## Next-Generation AMC Monitors

### Tiger Optics GO-cart™

Surveying different micro-environments in a fab is now fast and easy with Tiger Optics' mobile **GO-cart**. It can be equipped with any combination of **T-I Max** units to monitor simultaneously for the most critical contaminants in cleanroom air.

The GO-cart is easy to move around the fab and comes with the following features:

- Space for up to three **T-I Max** analyzers with low-power, fanless vacuum pumps
- Top-mounted central control touchscreen
- Integrated back-up power supply (optional)
- Conductive ESD paint (optional)



### Annual Remote Certification

- Low-cost and easy remote certification process, with no need to return the analyzer to the factory
- Annual re-certification by Tiger Optics ensures that your analyzer continues to meet its original specifications
- Up-to-date Verification Certificate to comply with your QA/QC standards



### Tiger Optics, LLC

250 Titus Avenue, Warrington, PA 18976  
Phone: +1 (215) 343 6600 • Fax: +1 (215) 343 4194  
sales@tigeroptics.com • www.tigeroptics.com

